

MASTERFINISH




MFPW3000

USER GUIDE

Components

1. Galvanised frame
2. Honda GX200 engine
3. Pressure washer pump
4. Rubber feet x 2
5. 10m hose
6. Gun (leave packaged)
7. Lance with Turbo nozzle (leave packaged)
8. Lance with 15 deg nozzle
9. Exhaust deflector
10. Inlet filter

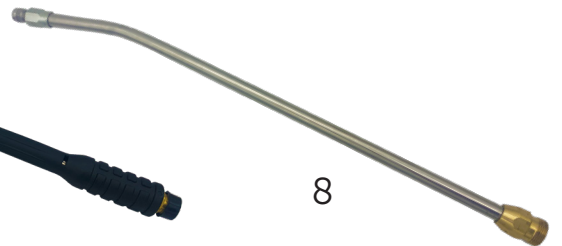

MFPW3000 User Procedure


- Check the oil level on the pump is at the halfway point on both sight glasses

Assembly

- Assemble the gun/lance

Hose Connections

- Connect the high pressure hose to the machine outlet. Black cap needs to be removed first.
- Connect gun/lance to the high pressure hose
- Connect water supply hose to the machine

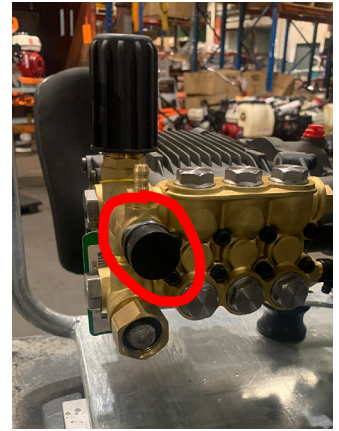

Before Starting the machine

- Ensure the machine is on a flat surface
- Turn on the water supply
- Pull the trigger on the gun until water starts to flow in a steady stream

Starting the engine

- Ensure the fuel valve is open
- Move the choke position to closed
- Turn on/off switch to ON
- Hold the trigger on the gun ON
- Pull the recoil and start the engine, once the engine starts release the gun trigger
- Open the choke and allow the engine to warm up.

Using the pressure washer

- With the engine warmed up, depress the gun trigger to enable the flow of water
- The pressure can be varied by turning the valve pictured.

Stopping the engine

- Allow the engine to run for 1 minute without load to cool the pump components
- Turn engine on/off switch to OFF
- Close fuel valve
- Turn off the water supply
- Pull the trigger on the gun to release all pressure in the system
- Disconnect hoses from machine

* Failure to release pressure before disconnecting the hose will result in the coupler o'ring seal blowing out.