



FITTING INSTRUCTIONS:

1. Remove washers and grease in front of mounting
2. The red coating contains hard materials and must be mounted on the core drill as shown, that is, towards the core drill motor.
3. When mounting, apply care and screw on the slider in order to avoid damaging the O-ring on the inside or pulling it out of its seat.
4. Put on the core barrel and tighten with spanners
5. Do not use if the core barrel is loose. Turn the barrel a minimum of 4 full turns until the core barrel is rigid.
6. Oil core drill shaft daily

WATER LEAKAGE:

1. If water leaks from between core drill shaft and core barrel.....
2. Place one O Ring (two supplied with each Slider) on core drill shaft after the Slider. Retighten
3. This will stop the leak

Note - The SLIDER's enormous effect may cause the tool to accidentally come loose. The working area must be secured accordingly.

The SLIDER should remain on the machine after mounting. Seals and micro tothing may be destroyed during removal.