
## Husqvarna Brick Saw Blade adjustments



Suits Husqvarna TS300, TS350 & TS400

Checking blade is 90 degrees:

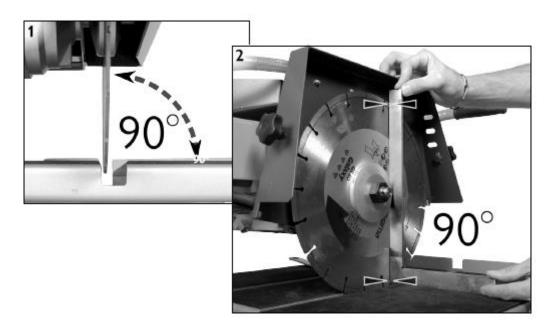

Ensure power is disconnected from saw.


Remove or open the blade cover


Lock down the handle in the fully down position

Fit an accurate right angle between the brick tray and the blade (2 above)

If adjustment is needed, locate the 90 degree screw to suit your model and adjust with two 13mm spanners



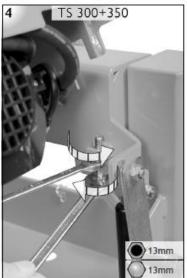

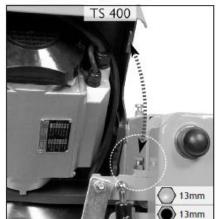


## **Checking blade alignment:**

Misaligned blade will increase loads on the motor and the blade will wear prematurely.

The workpiece will tend to break before being thoroughly cut through.

A properly aligned blade will improve cutting performance and increase longevity of machine and cutting blade

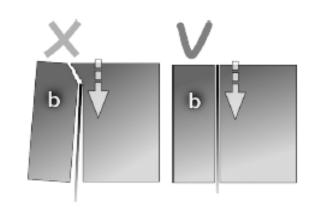





Ensure power is disconnected from saw.


Set blade in 90 degree position and lock it there

Fit a square angle ruler along brick tray edge and the cutting blade (1). If blade is not parallel to edge, adjust as below


Older TS400 only - remove handle (1 & 2) with 10mm socket

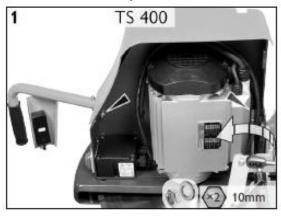

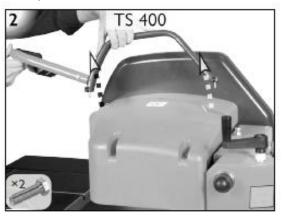

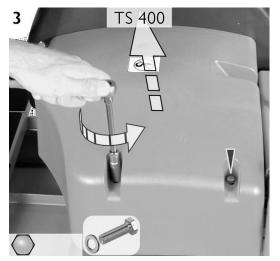


Remove two screws with 10mm socket and lift off motor plate cover (3)

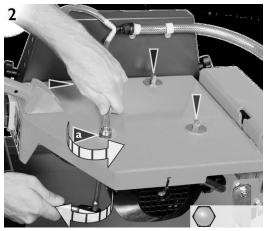

## All models:

Slightly loosen 4 screws on motor plate (1) with 13mm socket & spanner

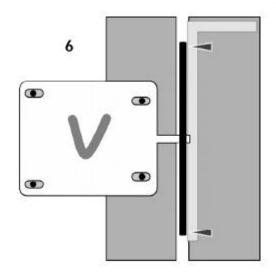

Slotted holes allow motor to move. Gently move motor until alignment is correct (6)

Re tighten and recheck alignment. Reassemble.

